


# SORT FÜT

## INSTRUCTION MANUAL




**NÖRDOST**  
MAKING THE CONNECTION


# INSTALLATION

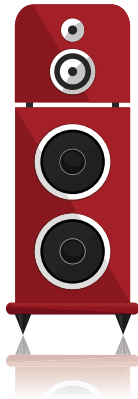

1. LAY SPEAKERS ON A CLOTH

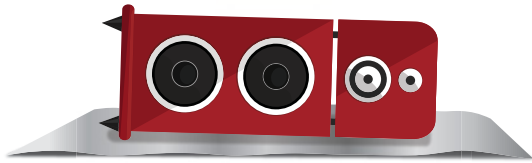

2. REMOVE ORIGINAL SPIKES OR FEET FROM UNIT

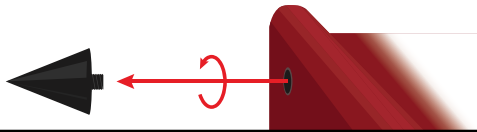

3. CONTACT DEALER TO IDENTIFY EXISTING THREAD SIZE

## INCLUDED THREADED ADAPTER SIZES

1/4-20



6mm




8mm




CONTACT DEALER FOR ADDITIONAL AVAILABLE THREAD SIZES


4. ATTACH THREADED ADAPTER TO FÜT UNTIL THE STUD BOTTOMS IN FÜT

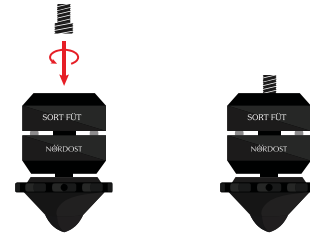

5. WHILE HOLDING THE TOP OF THE SORT FÜT BODY, THREAD ONTO SPEAKER UNTIL TIGHT  
(DO NOT FORCE: IF THERE IS RESISTANCE, REEVALUATE THREAD SIZE)

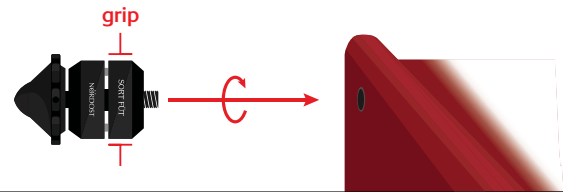

6. LIFT SPEAKER UPRIGHT AND PLACE INTO DESIRED POSITION

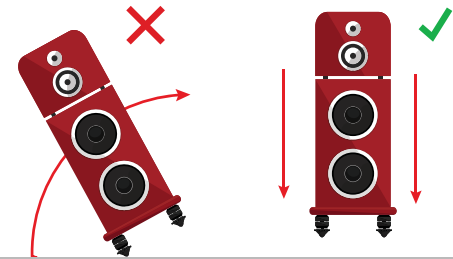


DO NOT PUT THE FULL WEIGHT OF YOUR SPEAKER ON ONE SORT FÜT. GET ASSISTANCE FROM ANOTHER PERSON TO HELP LIFT IF NECESSARY.




# LEVELING

1. PLACE UNITS INTO SOUNDSTAGE

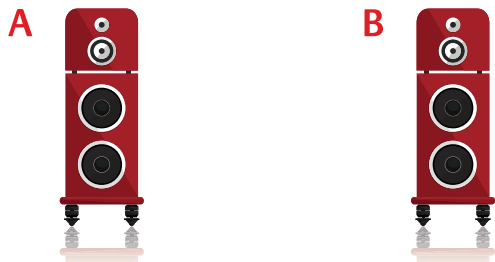


2. LEVEL/PLUMB SPEAKERS, MAKING SURE TO MEASURE ON BOTH 'X' AND 'Y' AXIS

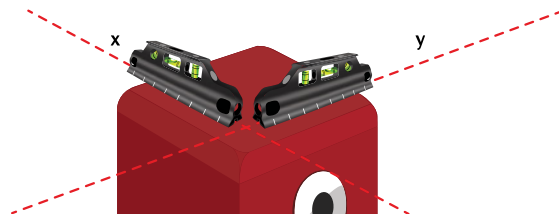



3. PLACE TARGET ONTO SPEAKER 'B' ON ANY AVAILABLE HORIZONTAL SURFACE



4. POINT LASER FOUND ON LEVELING SYSTEM FROM SPEAKER 'A' ACROSS TO TARGET ON SPEAKER 'B'

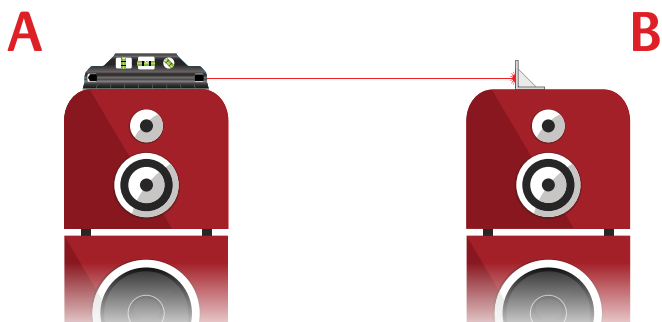

5. USE ADJUSTMENT TOOL TO TURN FINIAL DOMES UNTIL LASER BEAM MATCHES UP WITH CROSSHAIRS ON TARGET ON SPEAKER 'B'

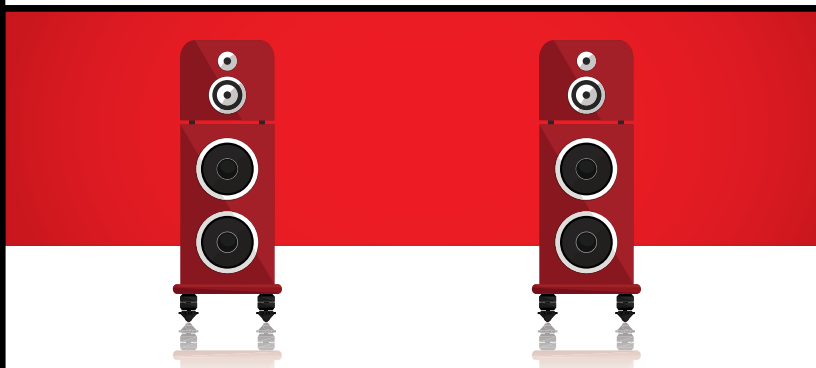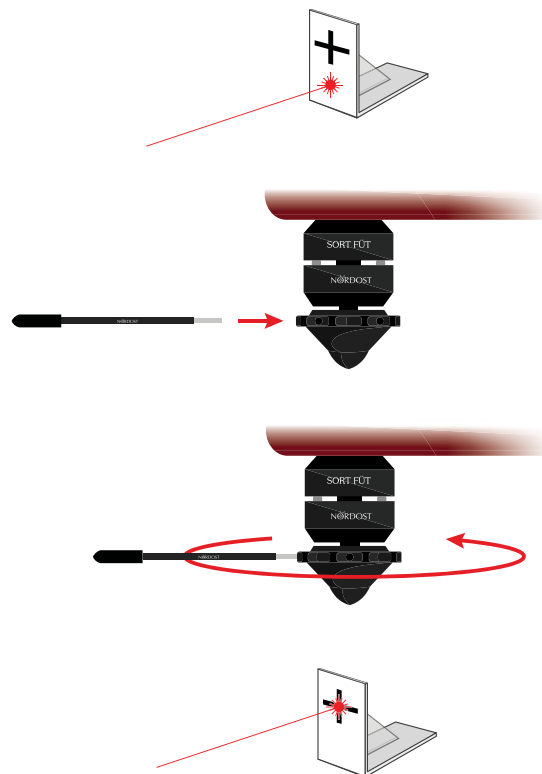

ALSO TRY...

# SORT KONE



- Resonance control equipment support
- Mechanically tuned construction
- Use in threes, fours or even fives
- Three levels of price and performance
- Universal application- these work everywhere!

**NORDOST**  
MAKING THE CONNECTION

Nordost 93 Bartzak Drive Holliston MA 01746 USA

Email: [info@nordost.com](mailto:info@nordost.com) Website: [www.nordost.com](http://www.nordost.com)